



# INSTRUCTION MANUAL

## 2600W & 3000W BLOW VAC

Model No: THEV2600 -- Product No: 193823003

Model No: THEV3000 – Product No: 193824002

ASSEMBLY REQUIRED  
SAVE THESE INSTRUCTIONS  
SPARES & SUPPORT: 01793 333212

Please read & understand this manual, paying particular attention to the safety instructions, before use.

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

Subject to change without notice.



# **CONTENTS**

**SPECIFICATION**

**IMPORTANT INFORMATION**

**GENERAL SAFETY INSTRUCTIONS**

**KNOW YOUR MACHINE**

**INTENDED USE**

**SET UP & PREPARATION FOR OPERATION**

**GENERAL OPERATION**

**MAINTENANCE & STORAGE**

**TROUBLE SHOOTING**

**NOTES PAGE**

**PARTS LISTS & DIAGRAM**

**EC DECLARATION OF CONFORMITY**

**WARRANTY**

If you require any assistance with regards to the contents or operation of your machine, please contact us:

**Tel: 01793 333212 - Monday to Friday 8.00am to 5.30pm  
(excl. Bank Holidays)**

**Email: [customerservice@handydistribution.co.uk](mailto:customerservice@handydistribution.co.uk)**

# SPECIFICATION

The manufacturer reserves the right to change the product specification and livery according to continued product improvements.

Model	THEV2600	THEV3000
Product No.	193823002	193824002
Motor Rated Power	230V-240V, 50Hz	
Motor Power	2600 W	3000 W
Protection Class	II – Double Insulated	
Speed	14000 min	6000-14000 min
Max Air Speed	270 km/h	150-270 km/h
Air Flow	720 m <sup>3</sup> /h	
Collector Capacity	45L	
Electric Cable Length	10 m	
Mulching Ratio	10:1	
Guaranteed Sound Power Level	102 dB(A)	
Vibration	4.0 m/s <sup>2</sup> = K: 1.5 m/s <sup>2</sup>	

## IMPORTANT INFORMATION



### WARNING

Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions can reduce the risk of fire, electric shock and personal injury.

#### **IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!**

This machine can cause serious injury to the operator and others, the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine.

Never use the product unless the grass box or guards are correctly positioned.

#### **DESIGNED FOR DOMESTIC USE ONLY.**

The Blow Vac is designed for use in private gardens, whose annual use does not generally exceed 50 hours and that are primarily used for blowing or vacuuming leaves and other garden cuttings, but not in public facilities, parks or sports grounds and not for agricultural or forestry use.

Compliance with this manual supplied by the manufacturer is a prerequisite for the proper usage of the machine. The operating manual contains servicing and maintenance instructions as well as directions for use.

#### **TRAINING**

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment.


















 
Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.

Never operate while people, especially children, or pets are nearby.

Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.

# GENERAL SAFETY INSTRUCTIONS

It is important that you read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.

	Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.		<b>Moving Parts</b> Rotating parts can contact or entangle hands, feet, hair, clothing or accessories. Traumatic amputation or severe laceration can result
	Wear gloves to protect your hands		Check your machine before turning it on. Keep guards in place and in working order. Frequently check to see that foreign objects are removed from the tool area before turning it on. Replace damaged, missing or failed parts before using it.
	Whenever the machine is in use, safety glasses must be worn to safeguard against flying objects. Hearing protection must also be used to protect the users hearing. Face masks are also recommended to avoid inhalation of debris.		Before working or undertaking any servicing or cleaning of the machine, ensure the electrical cable is removed from the power source.
	Wear appropriate close fitting clothing at all times, to avoid suction into the machine.		Double Insulated – II
	Keep all bystanders & animals at least 15 metres away from the machine during operation. If approached, stop the machine immediately.		Do not expose to rain or damp conditions
	Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.		Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.
	Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.		Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
<b>CAUTION</b>	Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.		According to the European directive 2012/19/EU for Waste Electrical and Electronic Equipment and its implementation into national law, electrical and electronic equipment that are no longer usable must be collected separately and disposed of in an environmentally correct manner.
<b>CE</b>	CE marking is a certification mark that indicates conformity with health, safety, and environmental protection standards for products sold within the European Economic Area.		Separate collection of used products and packaging allow materials to be recycled & used again. Reuse of recycled materials helps prevent environmental pollution and reduces the demand for raw material.
	Always disconnect your machine from the electrical supply before clearing, inspecting or adjusting any part of it, or if the supply cable has become damaged or entangled		Sound Power Level Image used for illustration purposes only, check machine and Declaration of Conformity for actual reading.

### **STAY ALERT**

Do not operate the machine while under the influence of drugs, alcohol, or any medication that could affect your ability to use it properly. Do not use this machine when you are tired or distracted from the job at hand. Be aware of what you are doing at all times. Use common sense.

### **AVOID DANGEROUS CONDITIONS**

Make sure there is adequate surrounding workspace. Cluttered areas invite injuries. Keep your work area clean with sufficient light. Keep the area around the machine clear of obstructions, grease, oil, rubbish and other debris which could cause persons to fall onto moving parts.

### **INSPECT YOUR MACHINE**

Check all bolts, nuts, and screws for tightness before each use, especially those securing guards and drive mechanisms. Vibration during use, may cause these to loosen.

Form a habit of checking to see that all other tools/equipment are removed from the working area before turning it on.

Replace damaged, missing or failed parts before using it. Warning labels carry important information. Replace any missing or damaged warning labels.

### **DRESS PROPERLY**

Do not wear loose clothing, gloves, scarfs, neckties or jewellery (rings, wrist watches), which can be caught in moving parts. Protective electrically non-conductive gloves and non-skid heavy duty footwear are highly recommended when working. Wear a face or dust mask if the operation is dusty. Always wear safety glasses/goggles and/or face shields. Everyday eyeglasses have only impact resistant lenses; they are not safety glasses/goggles. Wear protective hair covering to contain long hair, preventing it from getting caught in machinery.

### **AVOID ELECTRICAL SHOCK**

Check that the electric circuit is adequately protected and that it corresponds with the power, voltage and frequency of the motor. Check that there is a ground connection, and a regulation differential switch further up the circuit. Ground the machine. Prevent body contact with grounded surfaces: pipes, radiators, ranges, and refrigerator enclosures. Never open the pushbutton box on the motor. Should this be necessary, contact a qualified electrician. Make sure your fingers do not touch the plug's metal prongs when plugging or unplugging the machine.

### **KEEP BYSTANDERS AND CHILDREN AWAY**

Keep unauthorised persons a minimum distance of 15 metres away from the machine. If approached, stop the machine immediately. Do not allow children to handle, climb on or in the machine.

### **DO NOT OVERREACH**

Keep proper footing and balance at all times when using the machine. Never stand on the machine. Serious injury could occur if the machine is tipped or if the moving parts are unintentionally contacted. Do not store anything above or near the machine, where anyone might stand on the machine to reach them.

### **AVOID INJURY FROM UNEXPECTED ACCIDENT**

Keep hands & feet out of the way of all moving parts. Do not place any part of your body or any tool e.g. in the machine during operation.

### **DO NOT FORCE TOOL**

Always work within the rated capacity. Do not use the machine for a purpose for which it was not intended.

### **NEVER LEAVE MACHINE RUNNING UNATTENDED**

Do not leave the machine unattended until it has come to a complete stop.

### **MAINTAIN YOUR MACHINE WITH CARE**

Clean the machine immediately after use. Keep the machine clean to ensure it operates to its full & safest performance. When maintaining this machine, only the manufacturer's original replacement parts should be used. The use of non-original manufacturer parts may invalidate your warranty.

## PROTECT THE ENVIRONMENT


Take left over materials to an authorised collection point or follow the stipulations in the country where the machine is used. Do not discharge into drains, soil or water.

## STORE IDLE EQUIPMENT

When not in use, the machine should be stored in a dry location. Keep the machine away from children and others not qualified to use it.

## PREPARATION

- Always wear appropriate footwear, such as work boots, and trousers when operating the machine. Do not operate the equipment when barefoot or wearing open sandals. Always wear safety goggles or safety glasses with side shields when operating the product.

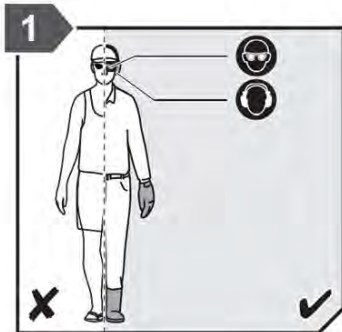

- Thoroughly inspect the area where the equipment is to be used and remove all objects which can be thrown by the machine.
- Before using, always visually inspect to see that the is not worn or damaged. Replace worn or damaged parts before future use.
- Do not operate the machine while under the influence of alcohol or drugs.
- Never operate the machine whilst standing on wet surfaces. This could cause you to slip while using.

## ELECTRICAL SAFETY

- Power plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid unintentional starting. Always check that the switch is in Off position before plugging in the product to the power supply. Do not carry a plugged in product with your finger on the switch.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose the product to rain or wet conditions.
- Water entering an appliance will increase the risk of electric shock.
- Electrical power should be supplied via a residual current device (RCD) with a tripping current of not more than 30 mA.
- Before use, check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately. **Do not touch the cord before disconnecting the supply.** Do not use the product if the cord is damaged or worn.
- If you need to use an extension cable, ensure it is suitable for outdoor use and has a current capacity rating, sufficient to supply your product. Check it before every use for damage, always uncoil it completely, during use because coiled cables can overheat. Damaged extension cables should not be repaired; they should be replaced with an equivalent type.
- Make sure the power cable is positioned so that it cannot be damaged, will not be stepped on, tripped over or otherwise subjected to damage or stress.
- Never pick up or carry the product by the electric cable.
- Never pull by the power cord to disconnect from the power supply.
- Keep the power cord away from heat, oil and sharp edges.

- Make sure voltage is correct for your product. A nameplate on the product indicates the product's voltage. Never connect the product to an AC voltage that differs from this voltage.
- Always ensure the cord from the handlebar to the mower body is never trapped, pinched or otherwise damaged during assembly or handle folding. Never apply power to the mower if this cable is damaged. Return to authorised service centre for professional repair.

#### **OPERATION**

- Only operate the machine in daylight or in good artificial light.
- Avoid operating the equipment in wet conditions.
- Always be sure of your footing on slopes. Exercise extreme caution when changing direction on slopes.
- Never run while using the machine, always walk.
- Use extreme caution when reversing or pulling the product towards you.
- Never operate the product with defective guards, or without safety devices, for example deflectors and/or collection bag, in place.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.

#### **Stop the motor and disconnect the electrical plug from the power source:**

- ✓ before clearing blockages or unclogging the chute;
- ✓ before checking, cleaning or working on the machine;
- ✓ after striking/collecting a foreign object, inspect the product for damage and make repairs before restarting and operating,
- ✓ if machine starts to vibrate abnormally (check immediately).
- Shut the motor off and wait until the motor and the fan come to a complete stop before removing the collection bag or suction tubes.
- Watch for holes, ruts, or bumps. Tall grass can hide obstacles.
- Do not use near drop-offs, ditches or embankments. The operator could lose footing or balance.
- Be alert and turn the machine off if children enter the area.
- Never tamper with safety devices. Check their proper operation regularly.


#### **MAINTENANCE AND STORAGE**

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- Replace worn or damaged parts for safety.
- Keep the machine free of grass, leaves, or other debris build-up, when being stored for any length of time.
- Allow the machine to cool before storing.
- Collection bags are subject to wear, damage, & deterioration, which could expose moving parts or allow objects to be thrown. Frequently check & replace them with the manufacturer's recommended parts, when necessary.



# KNOW YOUR MACHINE

1	Rear Handle	2	Trigger	3	Main Body
4	Front Handle	5	Cable Restraint	6	Blow/Vac Switch Adjuster
7	Top Tube	8	Bottom Tube	9	Collection Bag
10	Shoulder Strap	11	Wheels (THEV3000 only)	12	Variable Speed Adjuster (THEV3000 only)
13	Wall Hanger				

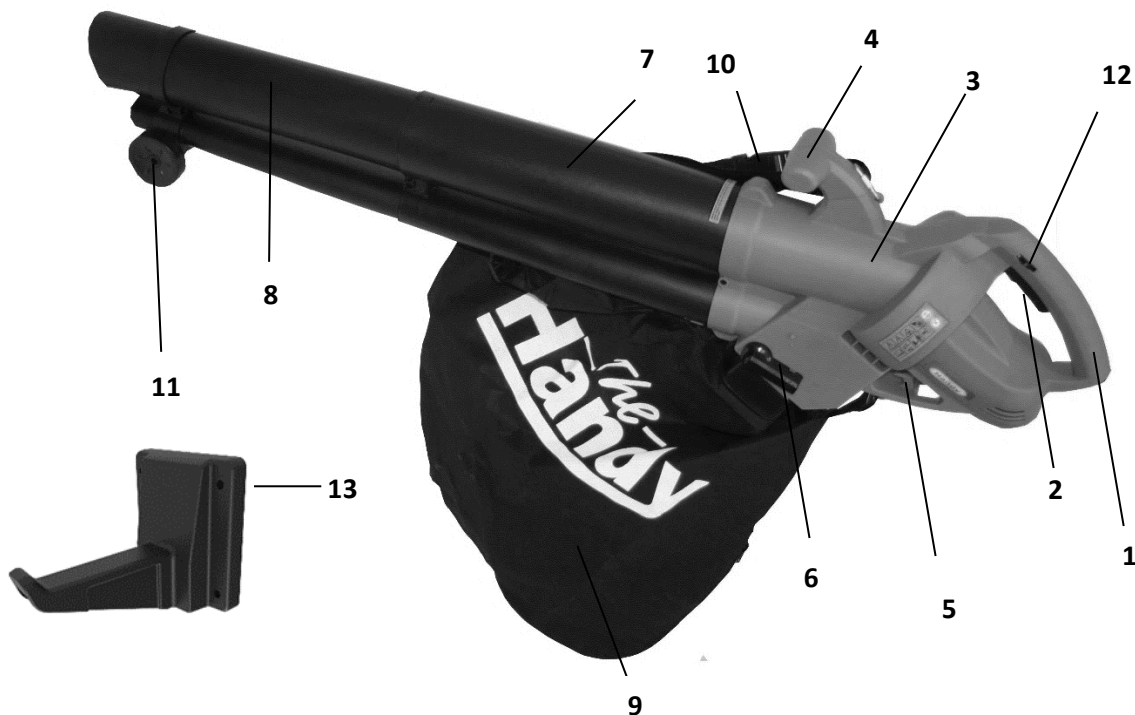

## INTENDED USE

### WORKING PLAN

- The Blow Vac is only suitable for domestic use and can be used only for processing light, dry garden waste materials such as leaves, grass cuttings, clippings, small twigs and pieces of paper.
- **NEVER** use to vac, blow or shred heavy sharp or flammable materials such as metal, stones, branches, fir cones, glass, barbecue coals, cigarette ends, dust, gravel, soil or liquids
- Blow material to a safe collection point, away from stones and other hard debris, which could damage the mulching fan and collection bag of the machine.
- **It is not advised to vacuum wet material as this may clog the exits, tubes and mulching fan.**
- Limit the amount of time the product is used continuously to a maximum of 30 minutes per session.
- Leave the machine to rest between sessions for between 5-10 minutes.
- Total amount of work performed per day with the machine, should be limited to 120 minutes maximum.
- Continuous use of the machine can cause "Repetitive Stress Injury (RSI)". If you feel discomfort, redness or swelling of your hands and fingers or any other body part, consult your doctor.
- Check local regulations for sound level and hours of operation constraints.

# SET UP & PREPARATION FOR OPERATION

Follow the operating instructions step-by-step and use the pictures provided as a visual guide to easily assemble the machine. Please ensure that you have all the below necessary parts, before commencing with the assembly. To assemble, you will require a cross head (Philips) screwdriver.

With your Handy Blow Vac, you will receive:

- 1x Instruction Manual
- 1x Handy Blow Vac
- 1x Collection Bag
- 1x Wheels (THEV3000 only)
- 1x Front Handle
- 1x Shoulder Strap & Clasp
- 2x Tubes
- 2x Large Tube Screws
- 1x Small Wheels Screw (THEV3000 only)
- 1x Wall Hanger
- 4x Hanger Screws

In the unlikely event that you are missing a component, please do contact us on **01793 333212, option 2** or email **customerservice@handydistribution.co.uk** for assistance.


## ASSEMBLY

### TUBES

Connect the top suction tube to the bottom suction tube ensuring the securing tabs are housed correctly. Screw them together with a large tube screw.




Insert both tubes into the main body and screw together with a large tube screw.

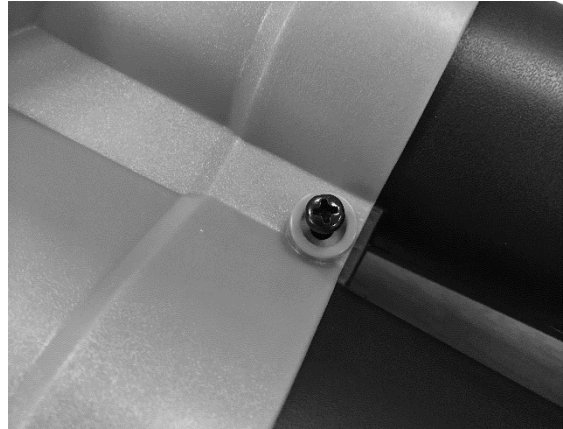

### FRONT HANDLE

Insert the front handle into the recess in the top of the main body, with the handle pointing towards the end of the tubes.

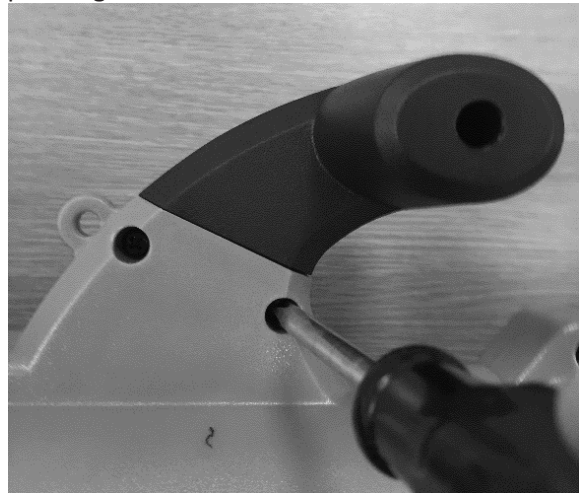

To assist with the handle fitting flush with the main housing, it may be necessary to loosen the two casing screws, by 2 complete turns and apply downward pressure on the front handle to insert. Tighten the two screws when housed.

### COLLECTION BAG

Hook the front securing clasp of the collection bag onto the bottom suction tube hook.



Hook the rear securing clasp of the collection bag onto the main body hook.



Slip the square opening of the collection bag onto the square opening of the main body.



It will snap into place, with inward pressure being applied to the two ribbed tabs on the front and back of the neck.



Ensure the zip fastener is closed on the collection bag!



### SHOULDER STRAP

The shoulder strap is attached to the machine using the metal triangular clasp. Unscrew the middle fixing of the triangle clasp, separate and fix this to the small molded ring behind the front handle and tighten by screwing the missing fixing to join the two halves of the triangle clasp.





### WHEEL ASSEMBLY (THEV3000 only)

Slide the wheel assembly over the large and smaller tube until the ridge is reached. Secure with the wheels small screw, ensuring it secures the two collars together and the wheel assembly does not slip off the tubes.



### CABLE RESTRAINT

Thread the cable through the restraint, forming a loop as shown.



Ensure that there is sufficient slack in the cable.



### POWER CONNECTION



#### WARNING!

**Before operating the Blow Vac, ensure the tubes are fixed in position and the collection bag is secure before connecting to the mains electricity supply.**

**To reduce the risk of injuries, always switch off the motor and pull out the mains plug before working on the machine.**

The product can be connected to any socket (with 230-240V alternating current). We recommend to always use the appliance via a Residual Current Device (RCD) with a tripping current of max. 30mA.

1. Mains leads on electrical garden equipment are particularly susceptible to insulation damage. The causes of this include the following:
  - ❖ Damage through crushing, if the mains lead becomes stuck under doors or windows.
  - ❖ Cracks caused by ageing of the insulation sheath.
  - ❖ Kinks caused by incorrect fastening of the mains lead.
2. Damaged mains lead should not be used under any circumstances as they may cause fatal injuries due to a damaged insulation sheath.
3. Always check the plug and cable and make sure they are in good condition before operation.

## GENERAL OPERATION



### WARNING!

In some countries regulations define at what time of the day and on what day's machines can be used and what restrictions apply!



### WARNING!

If the product vacuums a foreign object stop the motor! Switch the product off, disconnect it from the power supply and let it cool down. Inspect the product thoroughly for damage! Have any damage repaired before restarting!



### WARNING!

If the machine vibrates unusually during operation it may indicate that it is damaged! The product should be inspected and repaired immediately!

- Check the product, its power cord and plug as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
- Double check that accessories are properly connected.
- Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
- Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before releasing the handle.
- Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.
- Make sure that the area to be vacuumed is clear of stones, sticks, wire or other objects that could damage the mulching fan, causing the machine to be unbalanced, or the collection bag.
- It is recommended that the items to be vacuumed are blown to a safe area for vacuuming.
- Do not work with this product on a wet debris because it may stick to the product,

preventing the proper collection and discharge of collected material, and could also cause you to slip and fall.

- Do not try to vacuum material which is too big for the suction tubes to accept.
- Adjust the variable power. Operate the product at an appropriate speed. Do not operate it too fast or the discharge opening may get blocked and the motor may overload.
- Pay special attention when changing direction.
- Adjust the length of the shoulder strap to suit and hold the machine with both hands (one on the top handle, one on the rear handle/trigger).

## STARTING

The On/Off trigger is located on the underside of the rear handle and is operated by squeezing the trigger upwards.

## STOPPING

The product will automatically stop once the trigger is released. (Please note the internal mulching fan will continue to rotate for a short time, after the trigger has been released).

## USING AS A BLOWER:

Move the switch to the blower setting and move the Blow Vac gently from side to side a few centimetres above ground level.



### WARNING!

Never point the Blow Vac at people or animals & take extra care when using near sand, soil, loose gravel or shingle.

## USING AS A VACUUM

Move the switch to the vac/shredder setting.



Switch on and move the machine over the debris slowly.

Suction power decreases when the bag is full so ensure that it is emptied regularly.

Before emptying, disconnect the Blow Vac from the mains.

When you have finished vacuuming, return the switch to the blow mode to remove any material still lodged in the suction tubes.

## VARIABLE POWER SWITCH (THEV3000 only)

The variable power switch is located on the left hand side of the machines rear handle. This controls the speed for both vacuum and blow options.

This facility is useful around graveled and barked areas, when the lower settings will allow the debris to be vacuumed or blown, whilst the heavier shingle or stone remains.



## MAINTENANCE & STORAGE



### WARNING!

Before carrying out any repairs or servicing work, you must ensure that the product has been disconnected from the power supply. Repairs and maintenance work other than those described within this instruction manual may be performed only by an authorised service agent if financially viable.

## SERVICE & STORAGE

- Regularly check for obvious defects, such as loose, dislodged or damaged fixings and worn or damaged components.
- Check that covers and guards are undamaged and correctly fitted. Carry out necessary maintenance or repairs before using the product.
- If the device should happen to fail despite the care taken in manufacturing and testing, the product should be returned to your retailer.
- Do not clean the product while it is running.
- Ensure that all the fastening elements (screws, nuts, etc.) are tight at all times, so that you can safely work with the product.
- Check the product frequently for signs of wear. Replace worn or damaged parts.
- Store your product in a dry place.
- Clean the product with a brush or cloth. Do not use any solvents or water to remove dirt.
- Shake out the collection bag thoroughly, turn inside out and brush the bag out.
- You may wash a soiled bag by hand, using a mild detergent, but ensure it is thoroughly dry before re-using.
- If the zip becomes stiff to use, rub with dry soap.
- The components that are subject to most wear are the internal mulching fan and collection bag. You should therefore check the condition of them both at regular intervals. If worn or damaged, they must be replaced immediately.

## HANGER

The hanger has been supplied to allow the user to store their Handy Blow Vac, conveniently and off the ground.

Find a suitable position in your dry storage area (shed, garage, store room) and position high enough, that the Blow Vac is away from the floor, heat or direct sunlight. Ideally, a level (spirit or laser) should be used to ensure the hanger is positioned level. Secure with the four fixing screws supplied, (if suitable for the material attached to).



# TROUBLE SHOOTING



## WARNING!

Only perform the steps described in these instructions!

All further inspection, maintenance & repair work must be performed by an authorised service specialist, if financially viable! Contact us if the problem cannot be solved by yourself!



## WARNING!


If the product does not perform properly, makes unusual sounds, the motor does not start or stop as described, the mulching device does not work properly, or any other irregularity or malfunction occurs, do not attempt to repair the product by yourself. Please contact customer services or your local authorised service dealer.

Before attempting any of the below actions, ensure the machine is removed from the electrical supply.

PROBLEM	POSSIBLE CAUSE	FAULT CORRECTION
Will not start.	Not connected to power supply	Connect to power supply
	Power cord or plug is defective	Check by a specialist electrician.
	Fuse in plug failed	Replace with new 13A fuse
	Motor or switch defect	Return machine to retailer.
Material not being vacuumed correctly	Suction tubes blocked or clogged <b>(DO NOT VACUUM WET MATERIAL)</b>	Switch to blow mode and clear blockage. If does not resolve, remove from mains electric supply, remove both suction tubes and collection bag and ensure material is not blocking the machines openings.
	Air vents are blocked	Clean the air vents
Machine is vibrating violently	The fan has become unbalanced due to the impact of a foreign object e.g. a stone or gravel.	The fan needs to be replaced by an approved service dealer. Please note that this will not be covered under the warranty, as the warranty does not cover wear and tear or machines that are damaged by the user.
Blow/Vac Switch does not work	Switch flap is blocked by material/debris	Switch to blow mode and clear blockage. If does not resolve, remove from mains electric supply, remove both suction tubes and collection bag and ensure material is not blocking the blow/vacuum switch operation. Remove all debris.




# PARTS DIAGRAM – THEV2600 (193823003)

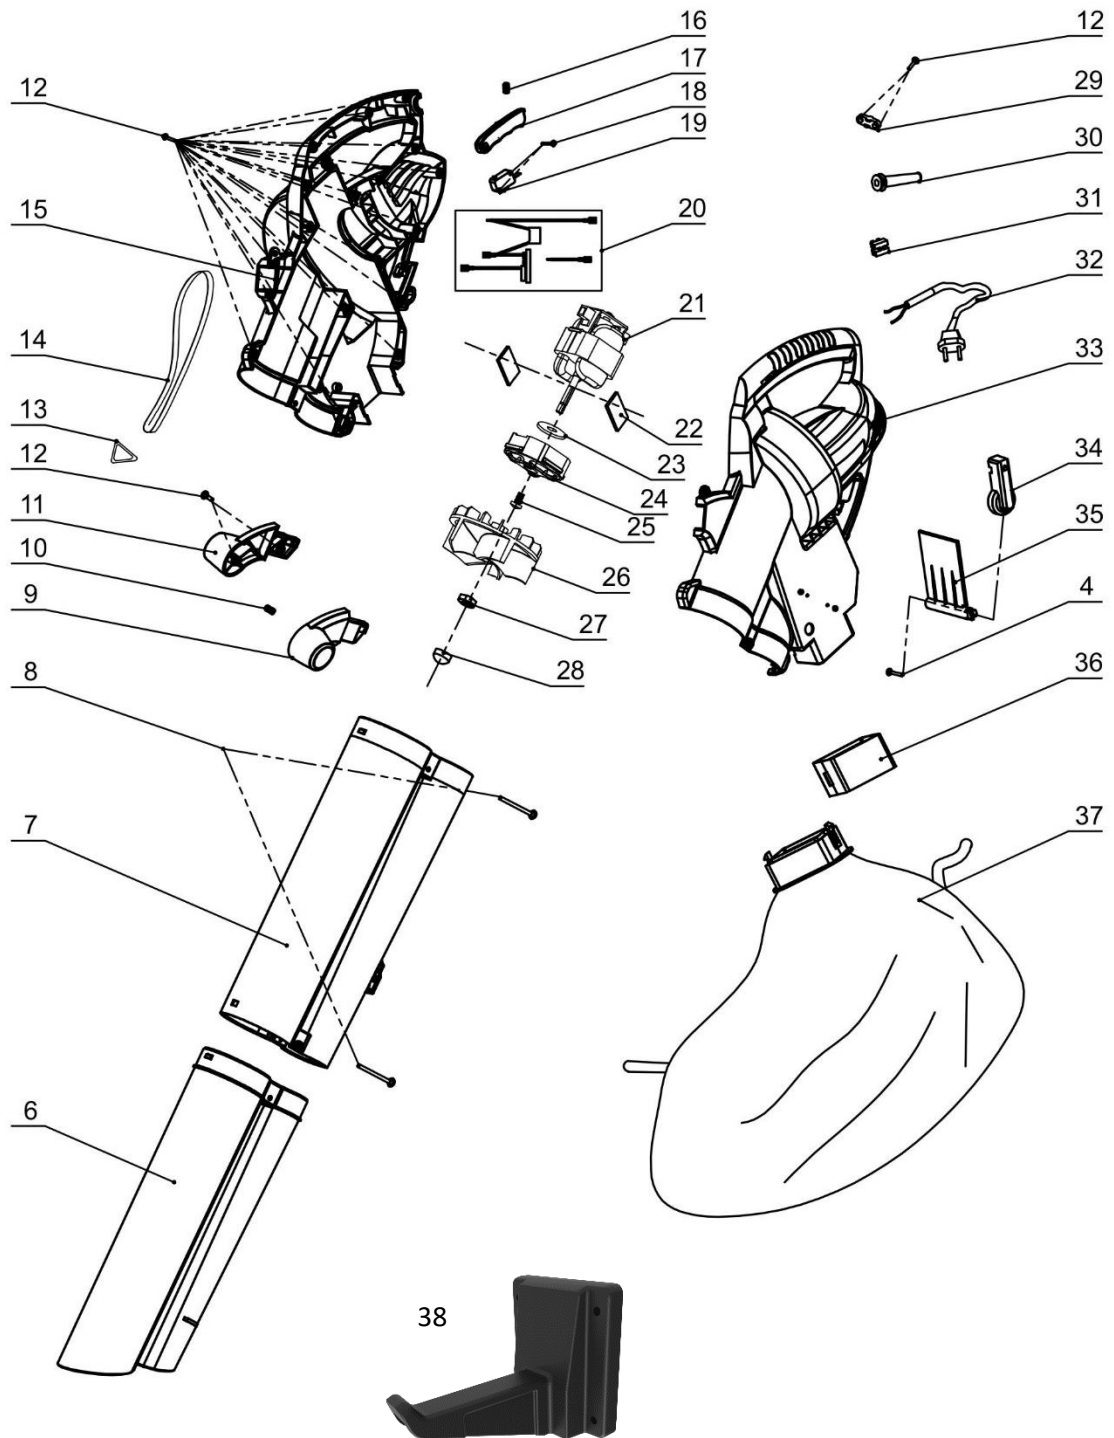

## PARTS LIST – THEV2600 (193823002)

<b>ITEM</b>	<b>PART NO</b>	<b>DESCRIPTION</b>	<b>QTY</b>
6	TH100-30	Suction Tube Lower	1
7	TH100-27	Suction Tube Upper	1
8	TH100-29	ST4.2*50 B Screw	2
9	TH100-2	Front Handle Assembly (Black)	1
10			1
11			1
12	TH100-3	ST4.2*15 B Screw	23
13	TH100-6	Shoulder Clasp	1
14		Shoulder Strap	1
15	TH100-301010063	Right Housing (GM) (ABS)	1
16	TH100-8	Switch Spring	1
17	TH100-9	Switch	1
18	TH100-104030045	ST3*18 A Screw	2
19	TH100-10	Micro Switch	1
20	TH100-11	Capacitor	1
21	TH100-4070204	Motor Assembly (Two Flat Sides)	1
22	TH100-12	Rubber Gasket	2
23	TH100-103010118	Fan Pad	1
24	TH100-301019237	Motor Bracket	1
25	TH100-104030335	M4*12 Bolt	2
26	TH100-301019200	Fan (Two Flat Sides)	1
27	TH100-16	M8 Lock Nut	1
28	TH100-17	Insulated Cap	1
29	TH100-18	Cable Clamp	1
30	TH100-19	Cable Sleeve	1
31	TH100-20	Terminal Block	1
32	TH100-21	10m Cable with BS Plug	1
33	TH100-301010064	Left Housing (GM) (ABS)	1
34	TH100-23	Blow/Vac Switch	1
35	TH100-24	Air Block Board	1
36	TH100-26	Inner Collar Bush	1
37	TH100-28	Collection Bag Assembly	1
38	TH100-HANGER	Hanger	1
39	TH100-HANGERSCREWS	Hanger Screws	4

# PARTS DIAGRAM – THEV3000 (193824002)

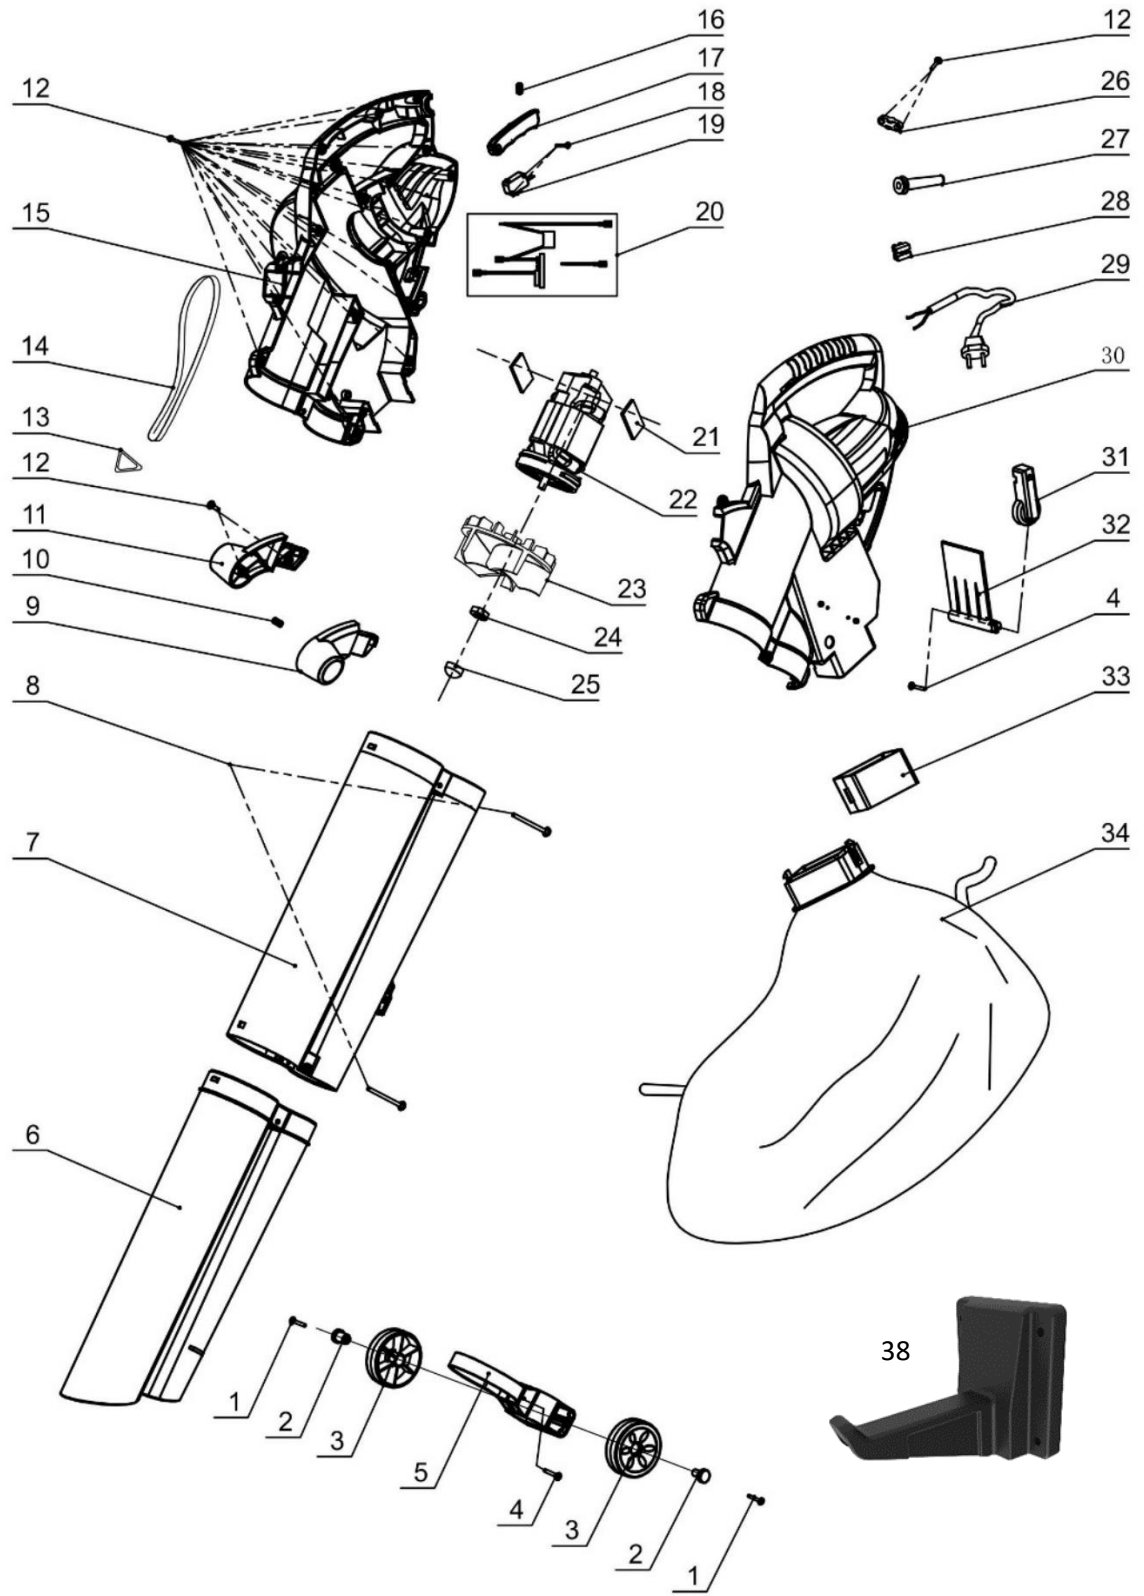

## PARTS LIST – THEV3000 (193824002)

<b>ITEM</b>	<b>Handy Part No.</b>	<b>Handy Description</b>	<b>Qty</b>
1	TH100-32	Wheel Bracket Kit	2
2			2
3			2
4			2
5			1
6	TH100-30	Suction Tube Lower	1
7	TH100-27	Suction Tube Upper	1
8	TH100-29	ST4.2*50 B Screw	2
9	TH100-2	Front Handle Assembly (Black)	1
10			1
11			1
12	TH100-3	ST4.2*15 B Screw	23
13	TH100-6	Shoulder Clasp	1
14		Shoulder Strap	1
15	TH100-301010063	Right Housing (GM) (ABS)	1
16	TH100-8	Switch Spring	1
17	TH100-9	Switch	1
18	TH100-104030045	ST3*18 A Screw	2
19	TH100-10	Micro Switch	1
20	TH100-4100134	Capacitor (Variable Speed)	1 set
21	TH100-4070204	Motor Assembly (Two Flat Sides)	1
22	TH100-12	Rubber Gasket	2
23	TH100-103010118	Fan Pad	1
24	TH100-301019237	Motor Bracket	1
25	TH100-104030335	M4*12 Bolt	2
26	TH100-301019200	Fan (Two Flat Sides)	1
27	TH100-16	M8 Lock Nut	1
28	TH100-17	Insulated Cap	1
29	TH100-18	Cable Clamp	1
30	TH100-19	Cable Sleeve	1
31	TH100-20	Terminal Block	1
32	TH100-21	10m Cable with BS Plug	1
33	TH100-301010062	Left Housing (Variable) (GM) (ABS)	1
34	TH100-23	Blow/Vac Switch	1
35	TH100-24	Air Block Board	1
36	TH100-26	Inner Collar Bush	1
37	TH100-28	Collection Bag Assembly	1
38	TH100-HANGER	Hanger	1
39	TH100-HANGERSCREWS	Hanger Screws	4

# EC DECLARATION OF CONFORMITY



**We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:**

**Designation:** 2600 Watt Electric Garden Blow Vacuum

**Model(s):** THEV2600

**Product Number:** 193823003

**Type/Serial No:** As per rating label on machine

**Complies with the following directives:**

2006/42/EC – Machinery Directive

**The conformity assessment procedure followed was in accordance with**

EN 60335-1:2012+A11:2014, EN 50636-2-100:2014, EN 62233:2008

**Notified Bodies:**

Interlek Testing Services Shanghai

**Address(es):**

Building No. 86, 1198 Qinzhou Road (North), Caohejing Development Zone,  
Shanghai 200233, P.R China

**Guaranteed Sound Power Level:**

(LWA) 102 dB(A)

**Vibration Measurement**

$4.0 \text{ m/s}^2 = K: 1.5 \text{ m/s}^2$

**Authorised signatory & technical file holder**

**Date:**

21/11/2017

**Signature:**

A handwritten signature in black ink, appearing to read 'S Belcher', written over a horizontal line.

**Name:**

Mr Simon Belcher

**Position:**

Managing Director

**Company:**

Handy Distribution Ltd

**Address:**

Murdock Rd, Dorcan, Swindon, Wiltshire, SN3 5HY.

# EC DECLARATION OF CONFORMITY



**We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:**

**Designation:** 3000 Watt Electric Garden Blow Vacuum

**Model(s):** THEV3000

**Product Number:** 193824002

**Type/Serial No:** As per rating label on machine

**Complies with the following directives:**

2006/42/EC – Machinery Directive

**The conformity assessment procedure followed was in accordance with**

EN 60335-1:2012+A11:2014, EN 50636-2-100:2014, EN 62233:2008

**Notified Bodies:**

Interlek Testing Services Shanghai

**Address(es):**

Building No. 86, 1198 Qinzhou Road (North), Caohejing Development Zone,  
Shanghai 200233, P.R China

**Guaranteed Sound Power Level:**

(LWA) 102 dB(A)

**Vibration Measurement**

4.0 m/s<sup>2</sup> = K: 1.5 m/s<sup>2</sup>

**Authorised signatory & technical file holder**

**Date:**

07/12/2016

**Signature:**

A handwritten signature in black ink, appearing to read 'S Belcher', written over a horizontal line.

**Name:**

Mr Simon Belcher

**Position:**

Managing Director

**Company:**

Handy Distribution Ltd

**Address:**

Murdock Rd, Dorcan, Swindon, Wiltshire, SN3 5HY.

# GJ HANDY & CO LTD USER WARRANTY POLICY

## **Users Statement of Warranty**

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

## **Period of Warranty**

### **Webb (excludes Electric Handheld)**

#### **Webb Pro**

#### **Sanli Engine**

- a) 2 years from the original date of sale to the first domestic user.
- b) 90 days from the original date of sale to the professional/commercial user.
- c) 90 days from the original date of sale when used for hire.
- d) A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear (e.g. but not limited to wheels, tyres, cutter bars, cylinders, cutting blades, blade boss, belts, cables, nylon line & spool, collection bags, spark plugs).
- e) Engines are supplied with a separate warranty to the machine. The engine manufacturers warranty statement which will be supplied within the engine instruction manual. All enquiries and warranty repairs should be discussed with the engine manufacturer or approved warranty repair dealer.
- f) 90 days from the original date of purchase for Replacement Spare Parts (unless normal wear & tear component, which are covered for 30 days).
- g) All machines' must be serviced within the first 12 months from the original date of purchase to comply with the warranty, failure to do so will invalidate the 2nd year of the warranty.

All warranty repairs must be undertaken by an authorised service dealer. These dealers have been accredited by GJ Handy & Co Ltd and agree to only use genuine parts and follow our repair procedures.

### **Webb Electric Handheld**

#### **Handy**

#### **Mowerland**

#### **Q-Garden**

- a) 1 year from the original date of sale to the first domestic user.
- b) 90 days from the original date of sale to the professional/commercial user.
- c) 90 days from the original date of sale when used for hire.
- d) A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear (e.g. but not limited to wheels, tyres, cutter bars, cylinders, cutting blades, blade boss, belts, cables, nylon line & spool, collection bags, spark plugs).
- e) Engines are supplied with a separate warranty to the machine. The engine manufacturers warranty statement which will be supplied within the engine instruction manual. All enquiries and warranty repairs should be discussed with the engine manufacturer or approved warranty repair dealer.
- f) 90 days from the original date of purchase for Replacement Spare Parts (unless normal wear & tear component, which are covered for 30 days).

All warranty repairs must be undertaken by an authorised service dealer. These dealers have been accredited by GJ Handy & Co Ltd and agree to only use genuine parts and follow our repair procedures.

**Not covered by this warranty**

- a) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.
- b) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operator's manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.
- c) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy & Co Ltd.
- d) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.
- e) The warranty policy is non-transferable and is only applicable to the original purchaser.

**Disclaimer**

- a) This warranty is only a remedy for defect of products. GJ Handy & Co Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.
- b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of GJ Handy & Co Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.
- c) Neither GJ Handy & Co Ltd nor any company affiliated with GJ Handy & Co Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

**General**

- a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.
- b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.
- c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.









For spares or support of your Handy product,  
please contact us:

Tel: 01793 333212

Email: [customerservice@handydistribution.co.uk](mailto:customerservice@handydistribution.co.uk)

Monday – Friday 8.00am to 5.30pm  
(excl. Bank Holidays)

**To see our range of garden machinery & equipment visit:**

**[www.thehandy.co.uk](http://www.thehandy.co.uk)**

**Making gardening easier & affordable since 1938**

Distributed by Handy Distribution, Murdock Road, Dorcan, Swindon, SN3 5HY